

HONDA CBR1000RR 2012 DIY WINDSCREEN INSTALL

Installation Instructions for Honda CBR 1000RR 2012

Thank you for purchasing Zero Gravity windscreen, which has been designed and manufactured to give years of safe & fun riding. These instructions give you an in-depth look at the installation process. To receive further assistance or parts, please call Zero Gravity® Sales Department at 805-388-8803 or E-mail at salesinfo@zerogravity-racing.com.

PLEASE READ BEFORE MOUNTING YOUR WINDSCREEN

Helpful hints: Use metric tools, clean hands, put the bike on a stand. Do not pry on the screen excessively, as it can break without warning.

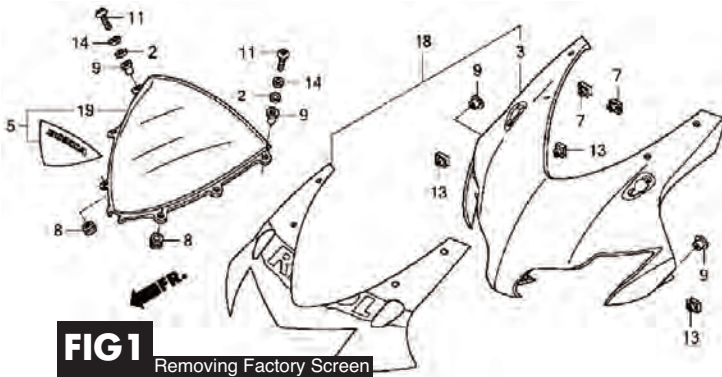


FIG1 Removing Factory Screen

Fig 1. Loosen both mirrors. Locate both fasteners located on the inside fairing. Be careful not to drop the mirrors or lose the nuts. Remove bottom wellnuts (for location see Fig 2) first. To remove bottom wellnuts simply pull wellnuts out. It's a bit of a pull since there are two layers (windscreen & fairing frame). Once removed pull windscreen towards the back, while guiding and pushing the front windscreen.

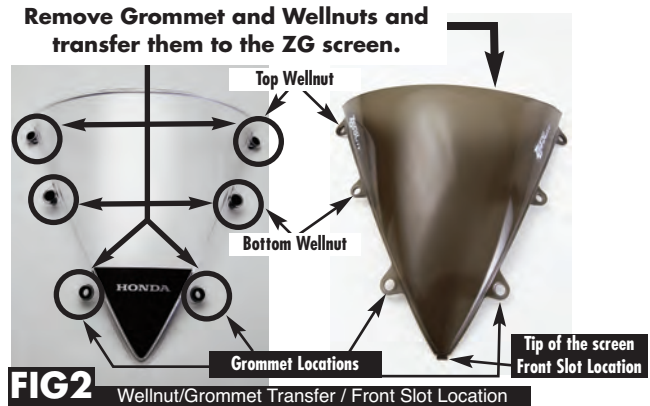


FIG2 Wellnut/Grommet Transfer / Front Slot Location

Fig 2. Make sure to transfer all grommets and wellnuts as shown above in the same way they were installed on your OEM screen.

Note the location: Tip of the screen, this will be important in the install process. **Caution: Tip of the screen are fragile and will break off if applied with heavy pressure.**

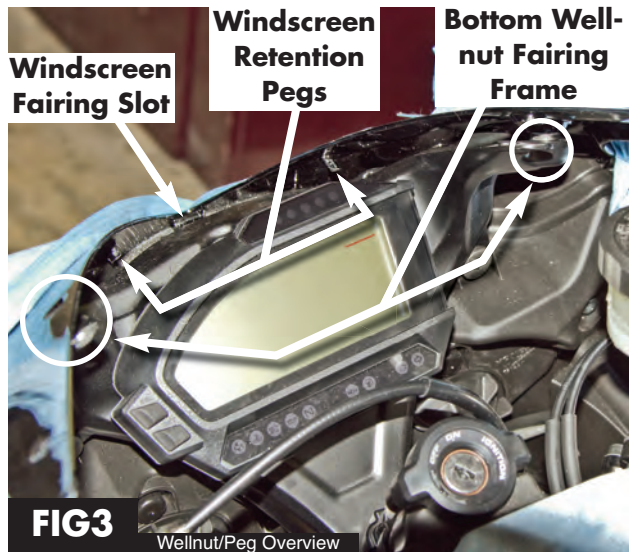


FIG3 Wellnut/Peg Overview

Fig 3. Locate the windscreen fairing slot, windscreen retention pegs and bottom wellnut fairing frame before you install your new ZG windscreen.

Caution: Those retention pegs are fragile and will break off if forced.

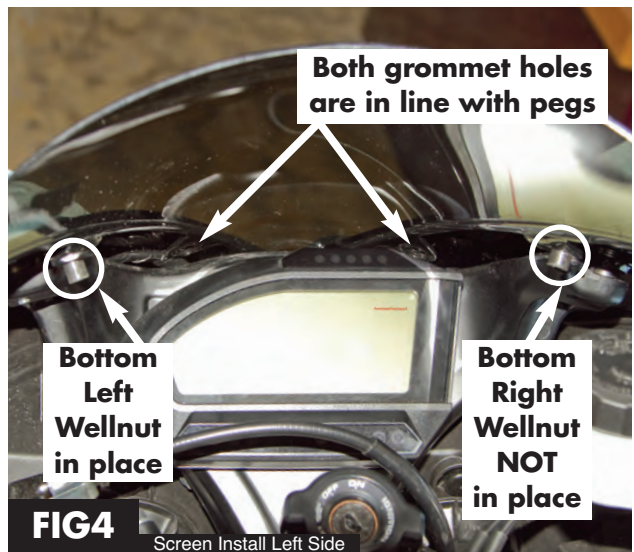


FIG4 Screen Install Left Side

Fig 4. While installing the windscreen, position **ONE** side of the bottom wellnut first, (Shown Bottom left side in first) and also guide the grommet holes into the pegs (**Both Sides for the grommet**)

Be careful not too exert too much force!

TEL: 800-345-9791



FAX: 805-388-8285

HONDA CBR1000RR 2012 DIY WINDSCREEN INSTALL



FIG5 Screen Install Tip of the screen / Front Slot Location

Fig 5. Locate front windscreen fairing slot. It should look like this in front of the windscreen.
Note: The right side bottom wellnut is not aligned yet.



FIG6 Screen Install Front Slot / Right side Wellnut

Fig 6. Pull back the screen slightly and push up to slide the Tip of the screen into the fairing slot. Once Tip of the screen is inserted and in place, **Apply light pressure** where the finger is pointing to flex the windscreen. Position the bottom right side wellnut in between the fairing and frame.



The screen is ready to finish the install, add 4 fasteners to the wellnuts to complete the install.

