



LOUVERED CHROME TRANSMISSION COVERS

7366

PARTS INCLUDED

- 1 Right Side Transmission Cover
- 1 Left Side Transmission Cover
- 1 Oil Dipstick Cap Assembly
- 1 Right Side Adapter
- 2 #10 Phillips Head Tapping Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

NOTICE

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Set of Metric Hex Wrenches, Torque Wrench (FT/LB), Set of Metric Hex Sockets, Phillips Head Screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING

YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

NOTE: If you have Kuryakyn Driver's Floorboards or a Kuryakyn Heel-Toe Shifter, you will have to remove the left (shifter) side of the Floorboards, or the Heel-Toe Shifter from the bike in order to remove and install the cover on this side. PIC 1

STEP 2

Remove the left and right (sitting on bike) Transmission covers from the bike by gently pulling outward at the center rear of the cover. The darts on the transmission covers fit into rubber grommets, so there will be tension on them. Pull slowly but firmly until the darts release. Doing the same, work your way to the front of the cover. Pull outward slowly so the darts are not damaged when pulled from the rubber grommets on the bike. Set these aside, they will not be reused. PIC 2

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
 - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

NOTE: After removing the OEM side cover, make sure the rubber grommets remained attached to the locations on the bike shown in PIC 3. Re-install if needed.

NOTE: If you have Küryakyn Driver's Floorboards or a Küryakyn replacement Brake pedal, you may want to cover the inside edge of the pedal with masking tape to prevent scratching the cover on installation. You may also have to depress and hold the pedal down for sufficient clearance to install the new cover without scratching it.

STEP 3 On '01-'10 models only: Locate the right hand adapter from the kit. Using the supplied #10 Phillips head tapping screws, install it to the right Cover before proceeding to the next Step. PIC 4

NOTE: When installed in the following Steps, the upper front portion of the covers are intended to be on the outside of the frame, not tucked under the frame.

STEP 4 Remove the oil dipstick.



NOTE: After removing the dipstick, cover the opening in the motor with a clean rag or piece of tape so no debris can fall into it.

STEP 5 Start the included setscrews into the Chrome Dipstick Cover. Place the Cover over the dipstick and center the dipstick in the cover. PIC 5 Alternately snug the setscrews until they are tight. This will help keep the Cover centered and keep it from tipping up during installation.

STEP 6 On the right (brake) side, line up the darts on the back of the Chrome Transmission cover with the rubber grommets on the supports, and gently push the darts into the grommets. PIC 3

STEP 7 Remove the clean rag or tape from the opening in the motor and install the dipstick making sure it is fully seated in the motor.

STEP 8 On the left (shifter) side, line up the darts on the back of the Chrome Transmission cover with the rubber grommets on the supports, and gently push the darts into the grommets. Install the Küryakyn Driver's Floorboard or Heel-Toe Shifter (if equipped). **Tighten to 20 FT/LBS.**

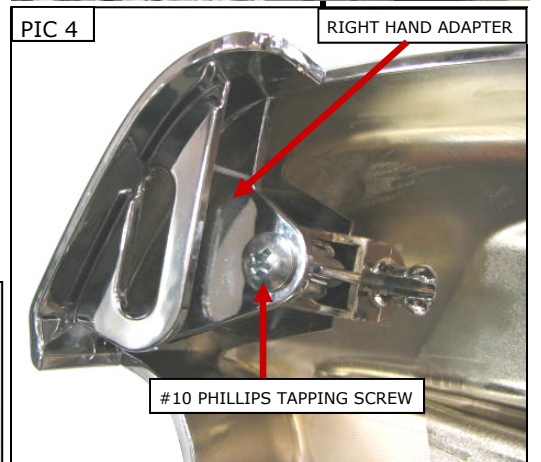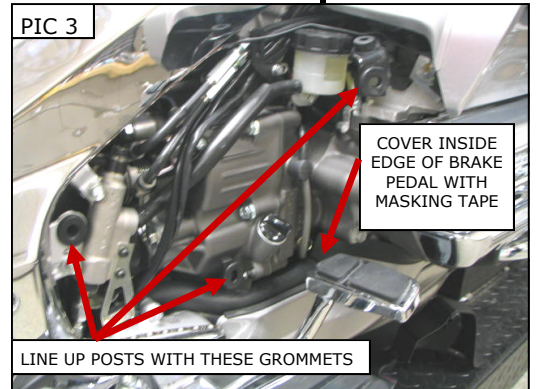

WARNING USE A GLOVE OR SIMILAR HAND COVERING IF REMOVING THE DIPSTICK IMMEDIATELY AFTER OPERATING THE MOTORCYCLE TO PREVENT BURNING YOUR HAND. THE DIPSTICK COVER IS METAL AND WILL RETAIN HEAT FOR A PERIOD OF TIME.

NOTICE It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.



Ride On!