

FOR OFF ROAD/RACE USE ONLY!



**Part#: Captive Wheel Spacers
INSTALLATION INSTRUCTIONS**

1. Remove wheels from the bike.
2. Remove stock wheel spacer. (see Fig 1)
3. Install Driven wheel spacer with the thin lip inward. (see Fig 2)
4. Push on wheel spacer until it is fully seated. (see Fig 3)
5. Reinstall wheels and torque to factory specifications.



Fig 1

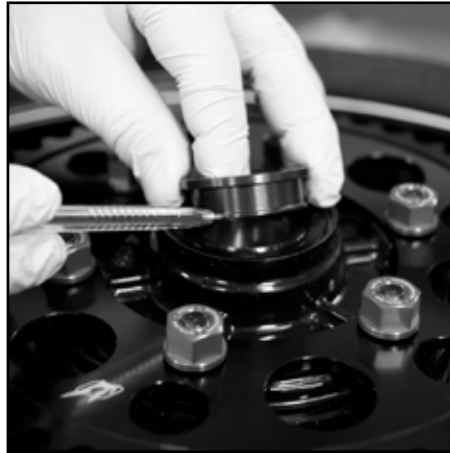


Fig 2



Fig 3

THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*

FOR OFF ROAD/RACE USE ONLY!



**Part#: Captive Wheel Spacers
INSTALLATION INSTRUCTIONS**

1. Remove wheels from the bike.
2. Remove stock wheel spacer. (see Fig 1)
3. Install Driven wheel spacer with the thin lip inward. (see Fig 2)
4. Push on wheel spacer until it is fully seated. (see Fig 3)
5. Reinstall wheels and torque to factory specifications.



Fig 1

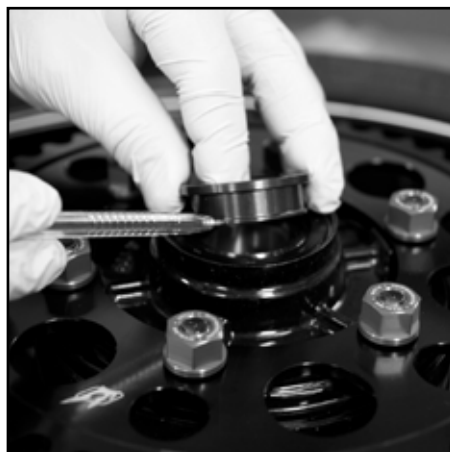


Fig 2



Fig 3

THIS PRODUCT IS INTENDED TO BE INSTALLED BY A CERTIFIED TECHNICIAN*