




Installation Instructions

60-0337RB Cover Protector

1) Remove the three OEM bolts from the bottom of the clutch cover.

2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

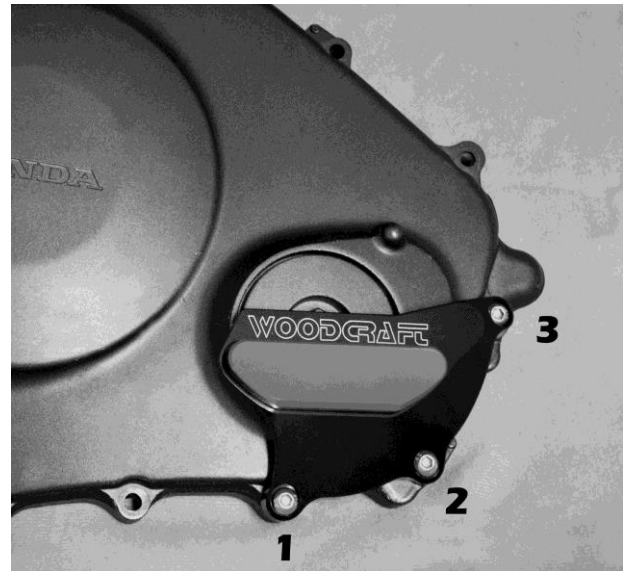

3) The 60-2500 rubber pad should be adhered to the back side of the cover.

4) Install the Woodcraft cover with the included mounting hardware. The longer 6 x 35mm bolts go in holes #1 and #3, the shorter 6 x 30mm bolt goes in hole #2. Torque for these mounting bolts is about 7 ft-lbs.

5) Start the motorcycle and inspect for any leaks before riding.

NOTE: 04-05 CBR1000 owners will have to either trim the fairing or space it away in order to have the required clearance to mount the cover protector. To gain additional clearance, 04-05 owners can elect to run the cover without the skid pad.

WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. **FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.**