



RZR XP1000 / S900 Steel Frame Doors (2 & 4 seat) Install Instructions



Parts: 2 Door




NOTE: DO NOT dispose of any hardware from the stock RZR doors. You will use all of it to install your PRP Doors.

Read through all of the instructions completely before beginning the install.

Parts Included (2 Door):

- A. 2 Door assemblies (Driver and Passenger)
- B. 2 Rear "Triangle" Panels for XP 1000 (Driver and Passenger)

Parts: 4 Door

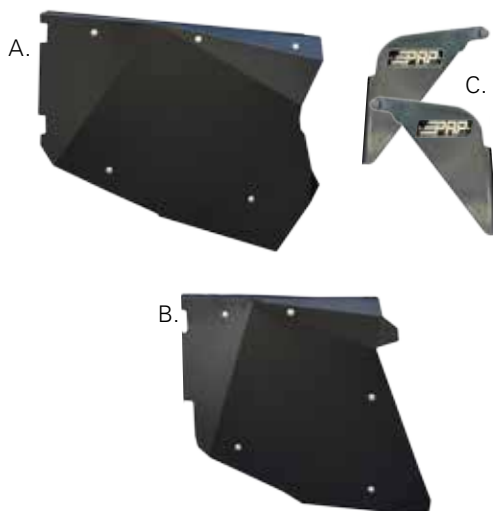

Parts Included (4 Door):

- A. 2 Front Door assemblies (Driver and Passenger)
- B. 2 Rear Door assemblies (Driver and Passenger)
- C. 2 Rear "Triangle" Panels for XP 1000 (Driver and Passenger)

Remove all parts from the box and unwrap completely using the packaging to lay out the pieces.

Tools Needed: (not included)

- 15mm socket and end wrench
- T25 Torx driver
- T30 Torx driver
- T40 Torx driver
- Standar/Flat head screwdriver

Time:

Approx 10–15 minutes per door





1. Remove Stock Door Latch

You will use this latch on your new PRP Doors.

Using your T30 Torx, remove the bolts holding on the door panel, closest to the latch. There are 2 per door.



- 1a.** Using your T25 Torx, remove the small bolts holding on the door latch, just behind the latch mechanism. There are 2 per door.

Keep the T25 screws for reuse.



- 1b.** Pull the door panel away from the frame and slide the latch out.



2. Remove Stock Door

Using a T40 Torx, remove the 4 hinge bolts (2 top and 2 bottom) from the stock door.

Keep the T40 screws for reuse.



3. Attach PRP Doors

Slide your PRP Doors on to the exposed hinge mounts. Reinstall T40 bolts but LEAVE THEM LOOSE so you can adjust the doors to fit.



4. Install Door Latch

Using the previously removed T25 bolts, attach the stock door latch to the new door frame. Tighten completely. Be careful of stripping the heads.

NOTE: Door panels are not pictured to the left but come pre-installed on the frame.



5. Line Up Door Latch

Close the door making sure the latch secures completely. The door may shift slightly forwards or back.



Tighten the T40 bolts on the hinge. Once tight, open and close the door a few times making sure the latch is striking correctly and closing completely.





Repeat steps for all doors.

The process for each door on a RZR XP 1000 or S 900 2 seat or 4 seat is the same. Follow the previous instructions to install the rest of your PRP Doors.

If you wish to install the triangular rear panels on your XP 1000, follow the instructions below.



Install XP 1000 Rear Panels (Optional)

6. Remove LOWER bolt from B-Pillar

Using your 15mm socket and end wrench, remove ONLY THE LOWER CAGE BOLT from the B-pillar.



9. Install Panel

Wrap the curved end of the panel around the front of the hinge tube then reinstall the lower cage bolt in the B-pillar.



Congratulations! Your new PRP Seats RZR Steel Frame Doors are installed and ready to use.

If you have any questions or experience issues, please contact your retail outlet first for help. However, the staff at PRP Seats is always happy to help at **1-800-317-6253**.

Thank you! Ride safe!